



*Starting at the top left corner, peel 3 " of the backing.*

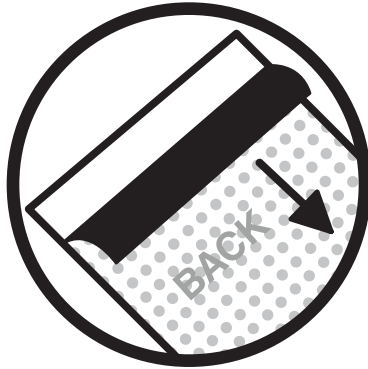

*Crease the backing to create ideal starting point.*



*Match the top left corner of the adhesive to the top left corner of your board and press and seal the corner*

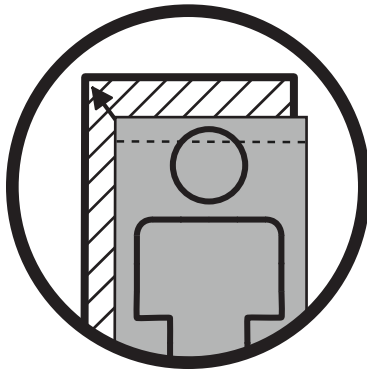

*With a smooth rubber or plastic object like a credit card or rubber spatula.*



*Slowly peel the backing and press the adhesive side down simultaneously, smoothing in a descending motion.*

